

# INFLATABLE TUBE MAN

## Setup Instructions

### Introduction:

Inflatable tube man blower is designed to provide the optimal air flow needed to make inflatable tube man move about and perform properly. Blowers are designed with durability and extended use in mind. This blower is proven, durable high quality and has been successfully used by customers all across the globe.

**Set Up:** This blower is designed to inflate the inflatable tube man attachment. The blower unit provides a constant air flow that effectively powers the inflatable tube man for optimal movement and attention grabbing performance upon proper setup.

1. Set up inflatable tube man in location without obstructions or hazards. Set up blower away from trees, power lines, cars, pedestrians and adverse weather.

2. Ensure nothing on the ground or nearby can snag, puncture or tear inflatable attachment.

3. Locate and test electrical outlet to ensure capacity and functionality.

4. Place blower on flat, stable and dry surface.

5. Snuggly attach inflatable tube man attachment around the hook and loop mounts on blower.

6. Plug blower in to a standard outlet (120v) with included 8ft electrical cord. Use only power sources with functioning GFCI breakers built in.

7. Turn on.



# INFLATABLE TUBE MAN

## Care Instructions



- Do not operate regular blower in wet or damp conditions
- Only operate on flat and stable surface
- Avoid rocks, gravel, sand and other small objects being sucked into the air blower
- Do not move or carry blower while unit is on or operating
- Do not place fingers or other objects into blower
- Turn off and unplug blower when not in use
- Never cover/obstruct air vents
- Only operate from 120v North American standard outlet
- Do not use aftermarket parts
- Do not alter or modify in any way
- Never use in location where product could come in contact with people, cars, building, trees, power lines, etc.
- Ensure power source is grounded and test for capacity and functionality
- Use only power sources with functioning GFCI
- Do not use blower if showing damage
- Do not remove screens, vents, or grill of blower
- Do not allow children to operate unit or play near blower

**Warning :** Do not cover or block air vents. These allow the blower to generate sufficient airflow to effectively power the inflatable tube man as well as to properly cool the blower.

For further assistance, please visit our website to chat with our Customer Service team.